

# Product Information

**Subject** Connect plastic drain hose to drain receptacle  
**Use With** Models JWT110\*A, JWT110\*M, JWT110\*N, JWT910\*N,  
SWT210\*A1124 and SWT210\*M1124

Remove the drain hose from its shipping position on the rear of the washer by unhooking the hose from the retainer clamp.

**IMPORTANT: Drain receptacle must be capable of handling a minimum of 1-1/4 inch (3.2 cm) outside diameter drain hose.**



Follow the instructions for your type of drain receptacle to properly install the drain hose.

### High Standpipe Installation:

Place the end of hose into the standpipe. Remove the beaded tie-down strap from accessories bag and place around standpipe and drain hose, approximately 12 inches (30 cm) down from top of pipe and tighten strap to hold hose to standpipe. This will prevent the drain hose from dislodging from drain receptacle during use.

### Low Standpipe Installation:

No. 562P3 Siphon Break Kit is required for this type of installation. This kit is available (as optional equipment at extra cost) through an authorized dealer or parts distributor. Installation instructions are supplied with the kit.

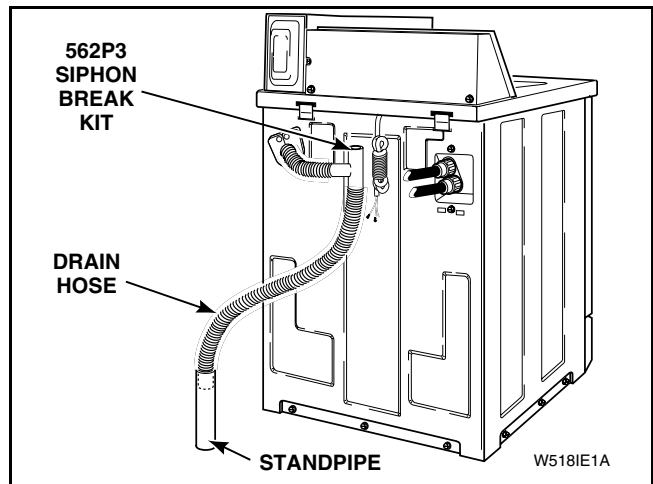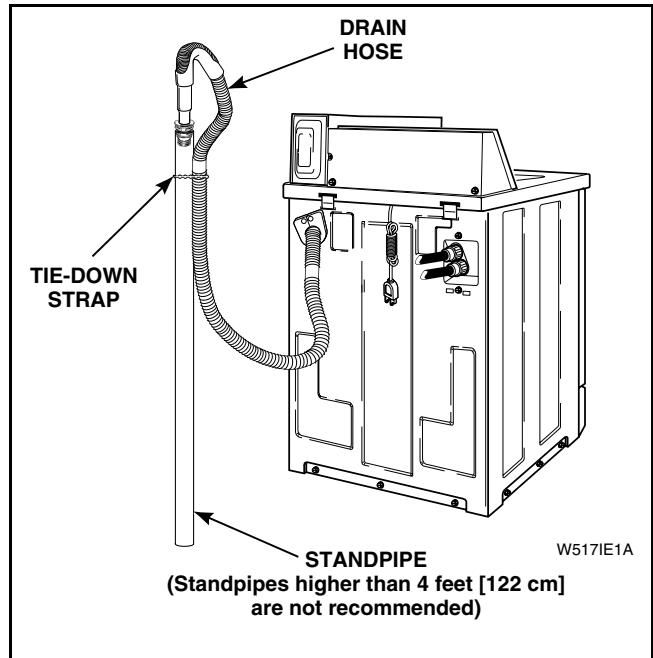

**In the Wall Installation:**

For installations of this type, the drain hose **MUST** be secured to one of the inlet hoses using the beaded tie-down strap from accessories bag.

**NOTE: End of drain hose must not be below height of cabinet top.**

